


OP-9630 AIR BELT SANDER

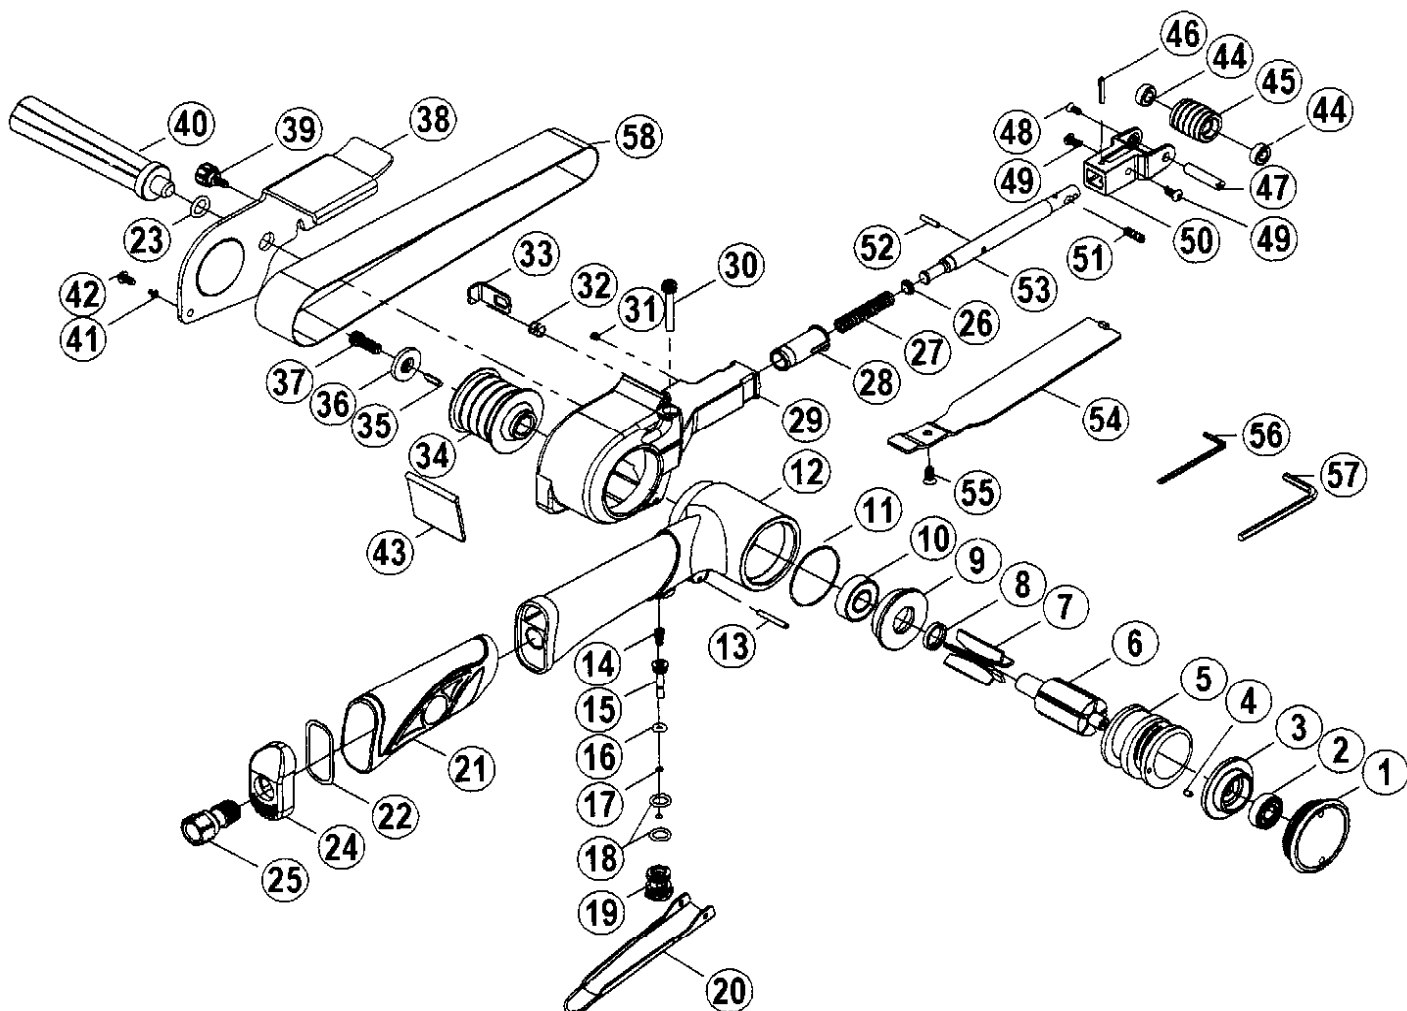

REF. NO	PART. NO	DESCRIPTION	Q' TY	REMARK	REF. NO	PART. NO	DESCRIPTION	Q' TY	REMARK
1	9630#01	CAP	1		31	9630#31	SET SCREW (M4*5)	1	
2	9630#02	BALL BEARING (608ZZ)	1		32	9630#32	SPRING	1	
3	9630#03	REAR END PLATE	1		33	9630#33	BLOCK SLICE	1	
4	9630#04	PIN (ϕ 3*5)	1		34	9630#34	DRIVE PULLEY	1	
5	9630#05	CYLINDER	1		35	9630#35	KEY	1	
※6	9630#06	ROTOR	5		36	9630#36	SPINDLE CHUCK	2	
7	9630#07	ROTOR BLADE	1		37	9630#37	SCREW(M6*16)	1	
8	9630#08	SPACER	1		38	9630#38	BELT GUARD	1	
9	9630#09	FRONT END PLATE	1		39	9630#39	HANDLE SCREW	1	
10	9630#10	BEARING	1		40	9630#40	GRIP	1	
11	9630#11	O-RING (50* ϕ 1.5)	1		41	9630#41	O-RING	1	
12	9630#12	HOUSING	1		42	9630#42	SCREW(M4*8)	1	
13	9630#13	LEVER PIN(D3*23)	1		43	9630#43	DUST COVER	1	
14	9630#14	SPRING	1		44	9630#44	BEARING (686ZZ)	2	
15	9630#15	VALVE STEM	1		45	9630#45	WHEEL	1	
16	9630#16	O-RING (3.6* ϕ 2.4)	1		46	9630#46	SPRING PIN (3*18)	1	
17	9630#17	O-RING (2.2* ϕ 0.9)	1		47	9630#47	LOCATION PIN	1	
18	9630#18	O-RING(P9)	2		48	9630#48	SCREW (M3*8)	1	
19	9630#19	VALVE BODY	1		49	9630#49	SCREW (M4*8)	2	
20	9630#20	SAFETY LEVER	1		50	9630#50	CONTACT ARM	1	
21	9630#21	COVER HANDLE	1		51	9630#51	SPRING	1	
22	9630#22	WASHER	1		52	9630#52	LEVER PIN (D3*14)	1	
23	9630#23	O-RING	1		53	9630#53	TENSION BAR	1	
24	9630#24	EXHAUST CONTROL SPACER	1		54	9630#54	SHOE 30	1	
25	9630#25	INLET BUSHING	1		55	9630#55	SCREW (M5*10)	1	
26	9630#26	WASHER	1		56	9630#56	HEX WRENCHEN KEY (2.5mm)	1	
27	9630#27	SPRING	1		57	9630#57	HEX WRENCHEN KEY(4mm)	1	
28	9630#28	GUIDE COVER	1		58	9630#58	SANDER PAPER BAND #100	1	
29	9630#29	GUARD BODY	1		58A	9630#58A	SANDER PAPER BAND #80	1	
30	9630#30	SCREW(M5*30)	1						

Remark: Ref No. or Part No. has been noted by ※ are not in warranty.

<http://www.onpin.com.tw>

DATE : B